

DAEWOO

The control panel features a central rectangular display screen. To the left of the screen are three vertical buttons: 'On/Off', 'Programa', and 'Inicio Diferido'. To the right of the screen are three vertical buttons: 'Start/Pause', 'Media Carga/Meia Carga', and 'Detergente'. Above the 'Programa' button are two icons: a dollar sign (\$) and an asterisk (*). Below the 'Programa' button are three program options: 'Rápido/Rápido 30' 40 °C', 'Eco', and 'Super 50min. 65°C'. Below the 'Inicio Diferido' button are two temperature options: 'Intensivo 65°C' and 'Higiene 70 °C'. To the right of the 'Start/Pause' button are two icons: a circular arrow and a square with a diagonal line. Below the 'Media Carga/Meia Carga' button is the text 'Reset 3 sec.'. Below the 'Detergente' button is a lock icon and the text '3 sec.'. The entire control panel is enclosed in a dark rectangular frame with rounded corners.

DA1D5FW0ES